




## River Raider JK Hi-Lift Jack Mount

Thank you for purchasing a River Raider product. Our goal is to provide a quality product that makes your jeep more capable, and your off-road experience more enjoyable.

- 1. Tap the factory holes on the Jeep roll cage using enclosed 1/2" tap and a large adjustable wrench. Be sure to start the tap straight in the hole to ensure good threads. As the tap cuts the threads it will get tight. Reverse the tap out a turn and then go back in until the threads are fully cut.**
- 2. Using the supplied 3/4" bolts and washers, attach the hi-lift jack mounts to the roll cage. Liquid thread lock is recommended on these bolts.**
- 3. Remove the factory bolt from the head of your hi-lift and replace it with the enclosed 2" bolt. This bolt will hold your hi-lift to the jack mount using the supplied washers and wing nut.**
- 4. Attach the foot of the hi-lift jack to the mount with the supplied 1" bolts, washers, and wing nut.**

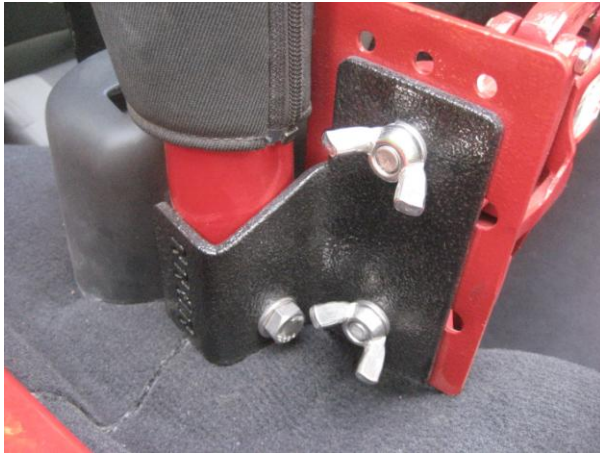

**Due to irregular castings, some hi-lift jack base plates may need to be drilled to allow proper attachment.**